ARAT Navigation mount

Car Manufacturer: ROVER

Type: Freelander

Part No: NS1259

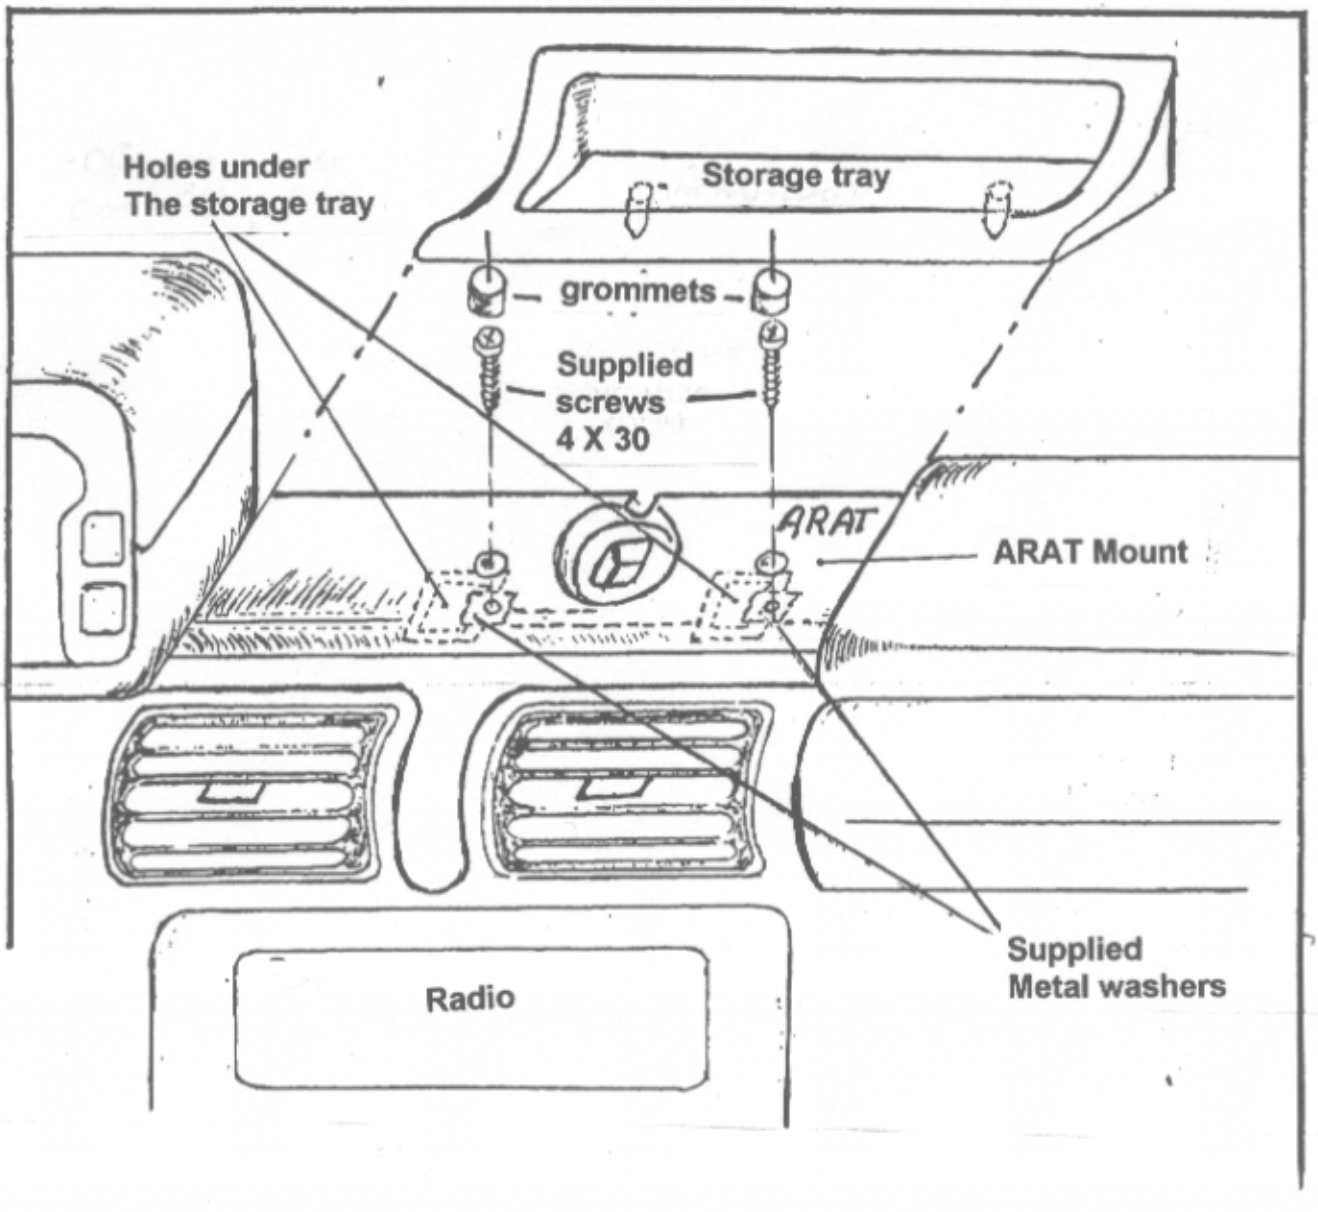

Installation instruction.

1. Remove the storage tray assembly
2. Place the metal washers on the edge of the holes beneath the storage tray
3. Place the ARAT mount assembly in the position where the storage tray was, and with the supplied screws 4 X 30, secure the mount through the base into the metal washers
4. Place the grommets into position covering the screw heads
5. The monitor cable can be placed in the channel of the mount.